

CT630H

enabling the laser/optical eye

1. Turn the machine on
2. Press “mode” until “LaserOFF” appears on the control panel display.
3. Press ▲ or ▼ and the laser should turn on

If this method does not work for you, please record a short video of what is happening when the buttons are pressed and contact our technical support team via support@ukcutter.co.uk. (Please make sure to get the control panel and cartridge in view)

