

# INSTRUCTION MANUAL



**HEAT PRESS MACHINE INSTRUCTIONS: CH1702**

The press is equipped with a manual override, a digital display, and a sound signal at the end of processing.

Our company makes easy and quick adjustment of pressure as a function for the print at any time.

Designed for printing textiles and other materials may be used on t-shirts, mouse pads, puzzles, ceramic tiles, and other flat surfaces items by using the flex, flocking, transfer printing paper, sublimation etc.

## **COMPLY WITH THESE INSTRUCTIONS**

1. Do not put the power cable on heating plates cover.
2. Do not touch heating plates when it is active. Caution: Risk of burns.
3. Do not open the machine control box and make changes to the device.
4. Do not allow liquid or metal objects inside the hot press.
5. Ensure the machine is connected with a plug connected to the mains.
6. Don't pull the cable to disconnect the plug.
7. Power off the machine when finished using.
8. Use extreme caution when using near children.

9. Make sure that the device is used in an environment.

## 1. SET PRESSURE


1.1. Adjust pressure in a clockwise direction to increase pressure and anti-clockwise to decrease by turning the knob.

## 2. SET TEMPERATURE & TIME


### 1. Set temperature



Press the SET button

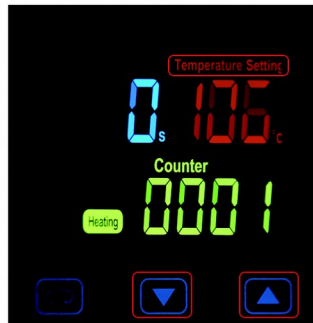

The "Temperature Setting" icon will blink when this is active

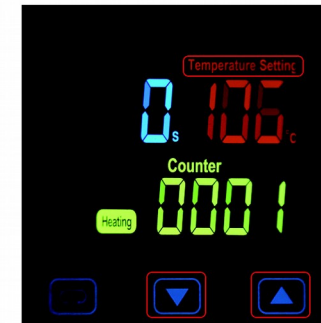

Press the Up or Down arrow to adjust Temperature accordingly


### 2. Set time



Press the set button after setting Temp



Press the Up or Down arrow to adjust Time Accordingly

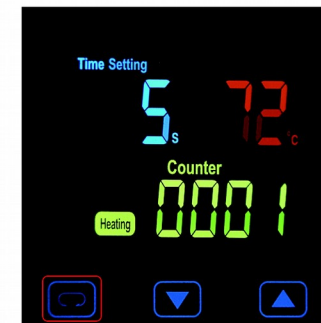

Press the SET button again to exit and save changes

The “ COUNTER “ reading indicates how many press cycles you have completed.

3.Place your objects on the machine when it has reached the desired temperature, clamp the heating plates down, then please wait for the timer to expire.

4.When the time has expired, the machine will open automatically (**CAUTION: KEEP YOUR DISTANCE, THE MACHINE WILL SPRING OPEN WITH FORCE**), please then take out the printing items.

### **3.For cleaning and maintenance of the printed products.**

3.1.Printed items can be washed 24 hours after printing.

3.2.Do not rub the printed image after printing.

3.3.Frequently washing items by washing machine can damage the image.

3.4.Avoid using cleaner or brushes on the printed images.